




Sony Cyber-shot DSC-P52 Buttons Replacement

This guide will outline the procedure to fix unresponsive buttons on the Sony Cybershot DSC-P52.

Written By: Trevor

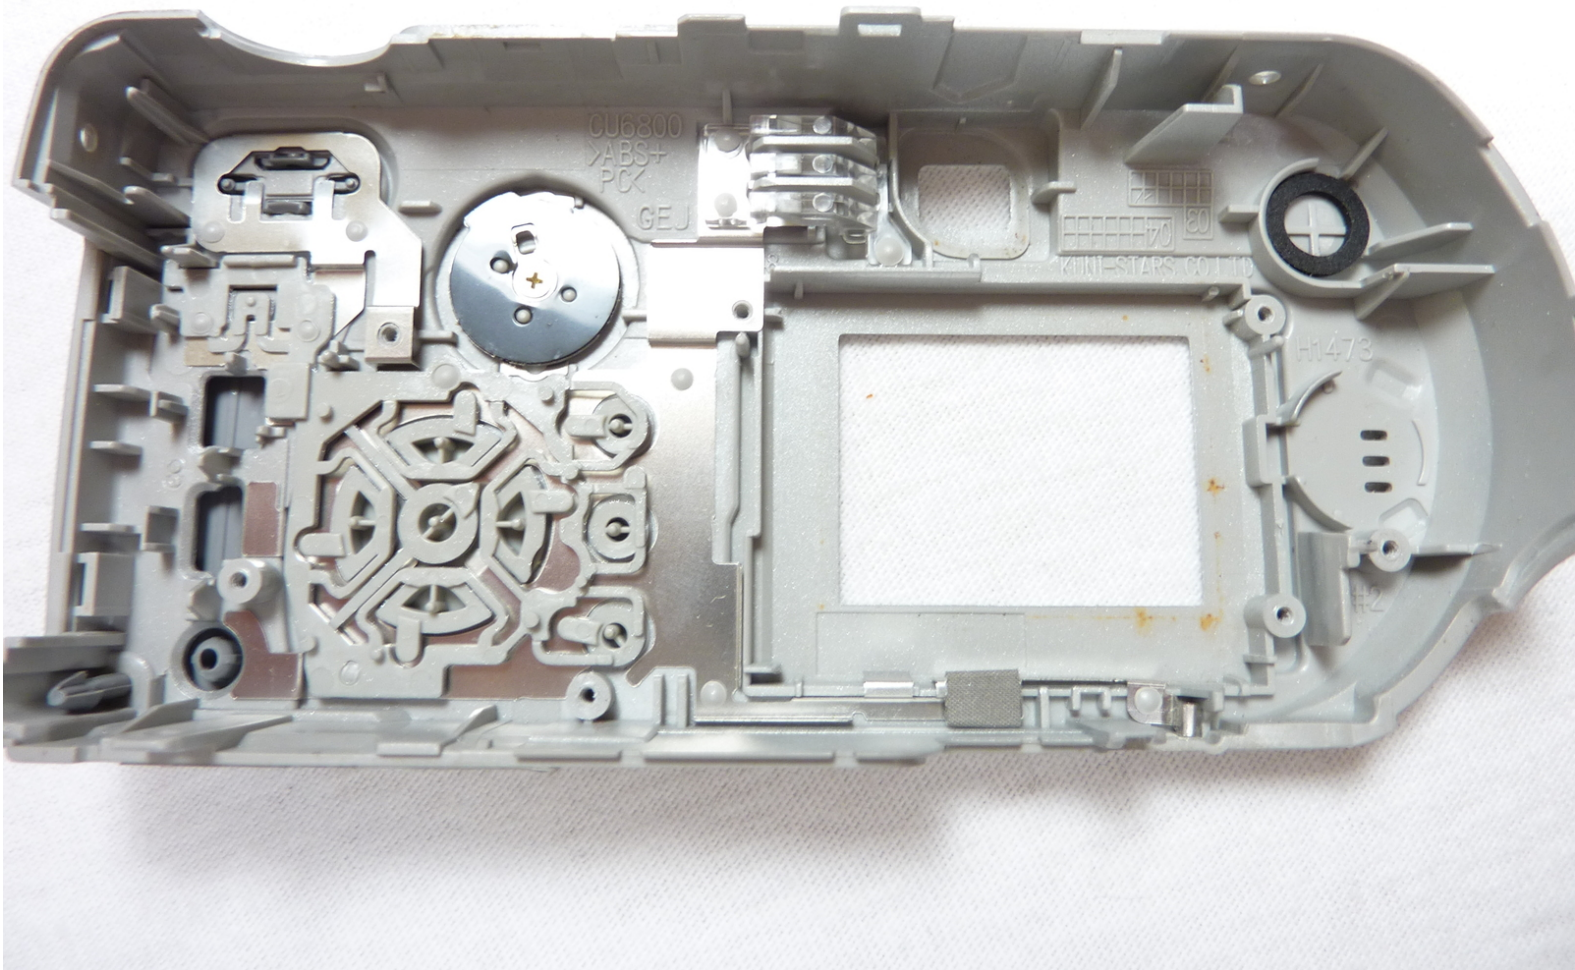

INTRODUCTION

If buttons are unresponsive, they may require cleaning. This guide will go through the procedure of button cleaning.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Potential button replacements](#) (1)

Step 1 — Outer Case




- Open battery compartment and remove batteries.
- Remove all visible screws on the outside of the case.
- ⓘ There should be three of them that are all easily located.

Step 2



- Open the memory card compartment.
- Remove the screw next to the memory card slot.

Step 3

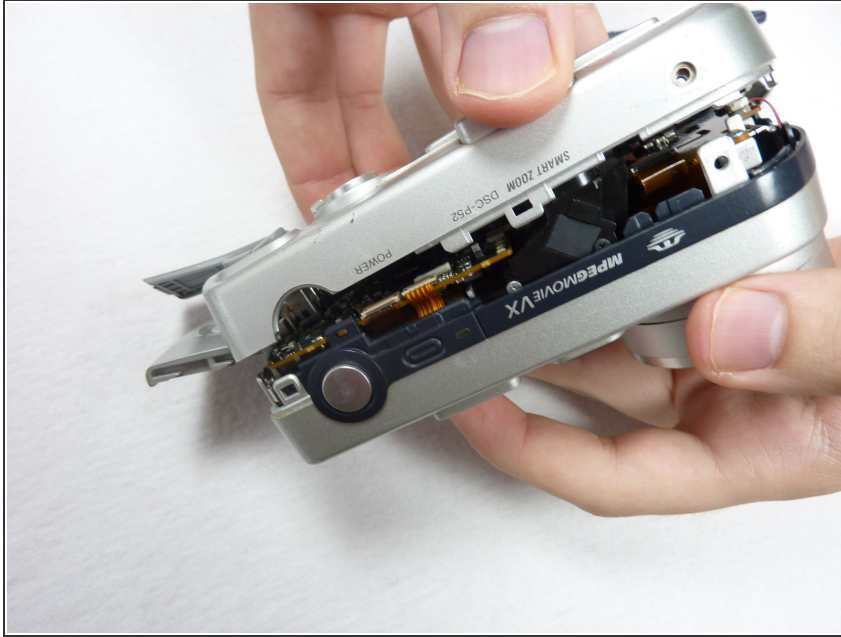


- Pull apart front and back cover pieces carefully.
- ⓘ The front cover should come completely free with little effort.
- ⓘ The back cover will still be attached to the circuit board.

Step 4




- Unclip all of the clips holding in the circuitry simultaneously and remove the back case.
- ⓘ The circuitry will still be connected to the back case by ribbon cables.

Step 5

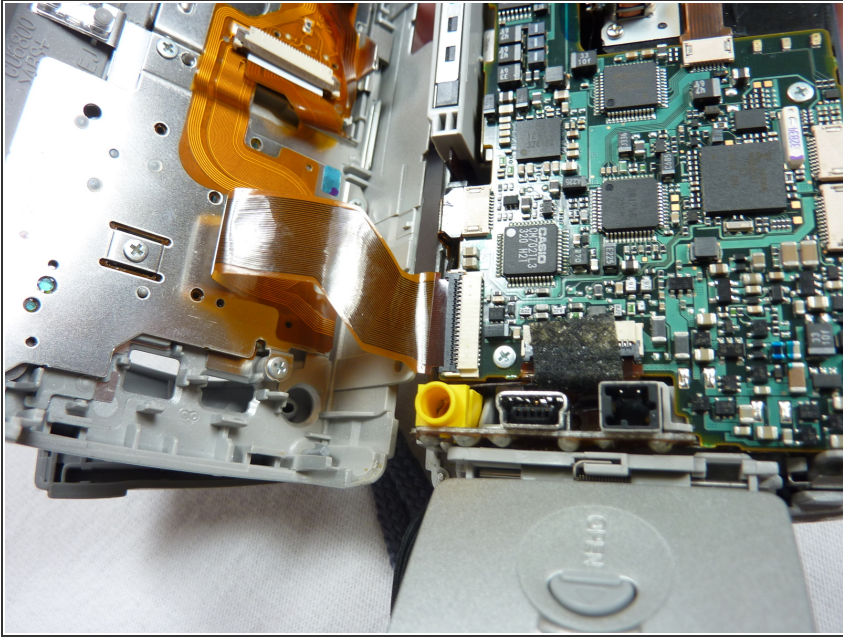


- Open case as shown.

Step 6

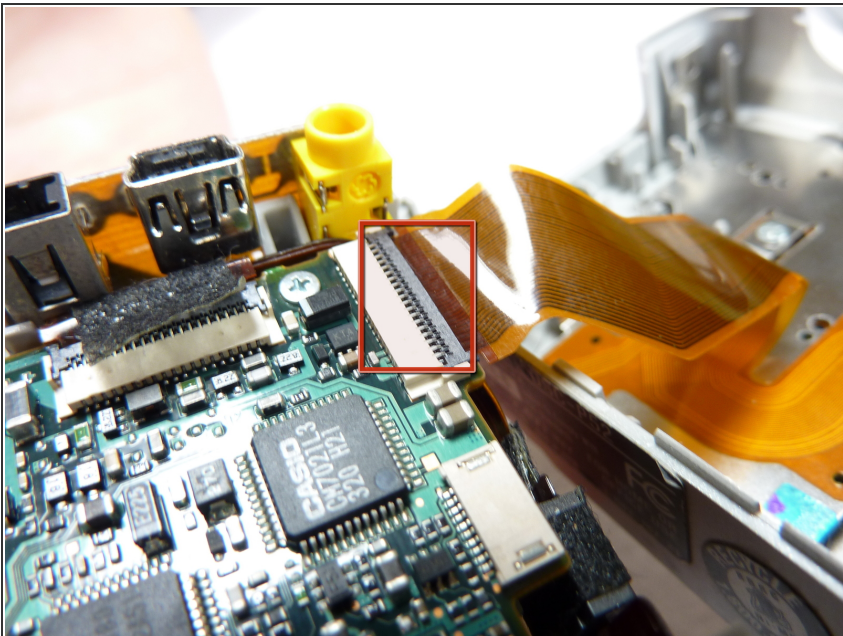


- Unclip the clip holding the ribbon cable in.
- ⓘ Other ribbon cables might not have a clips.

Step 7

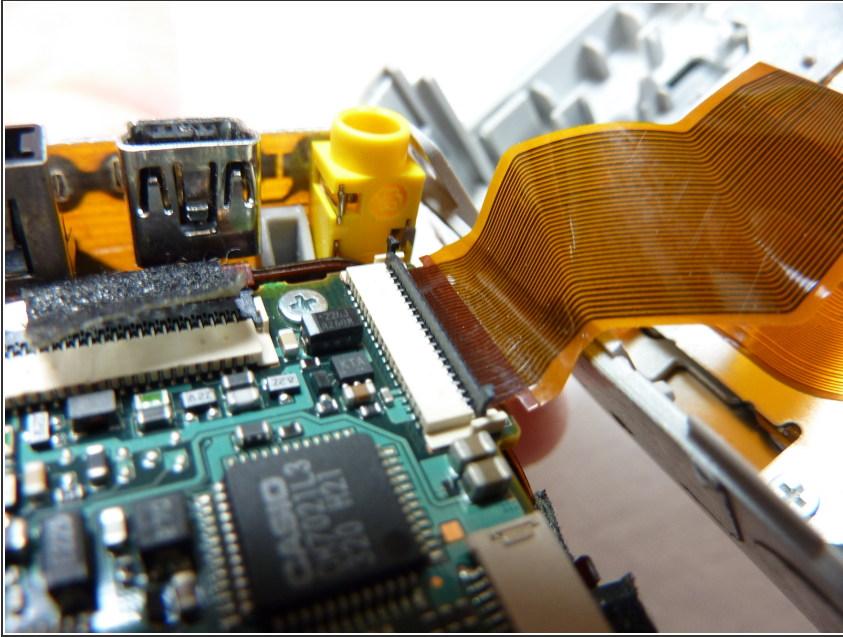


- Pull the ribbon cable out.

Step 8 — Buttons

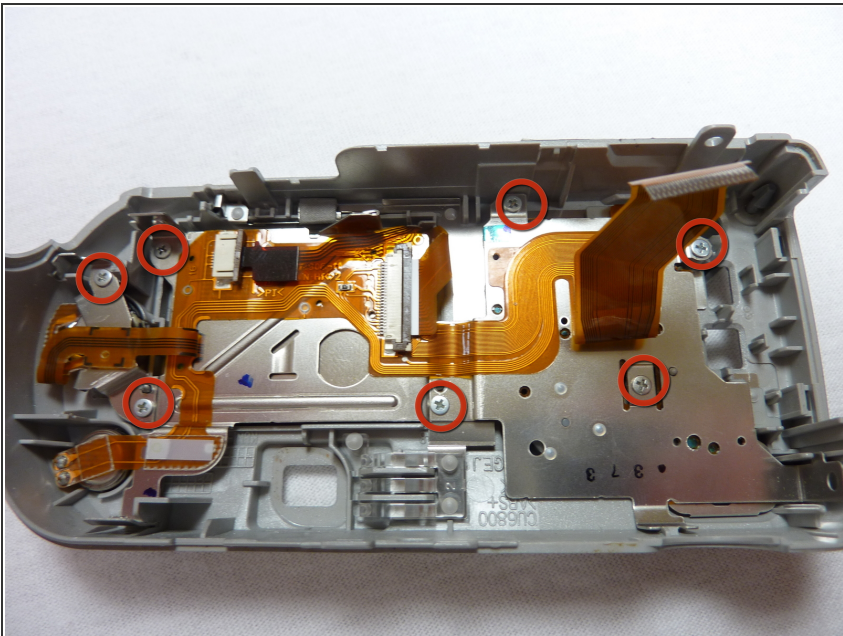

- Remove the 7 screws on the back side of the case, as shown in the picture.
- Remove the metal plate.


Step 9

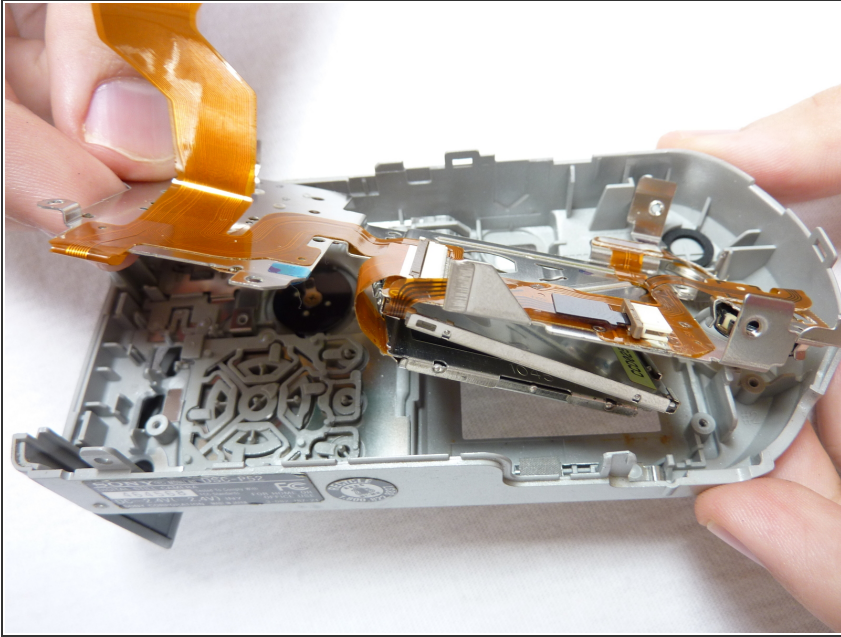

- Remove the LCD plate, ribbon cables and LCD display.

⚠ Be careful, broken and loose buttons may not be secure and could fall out.

Step 10

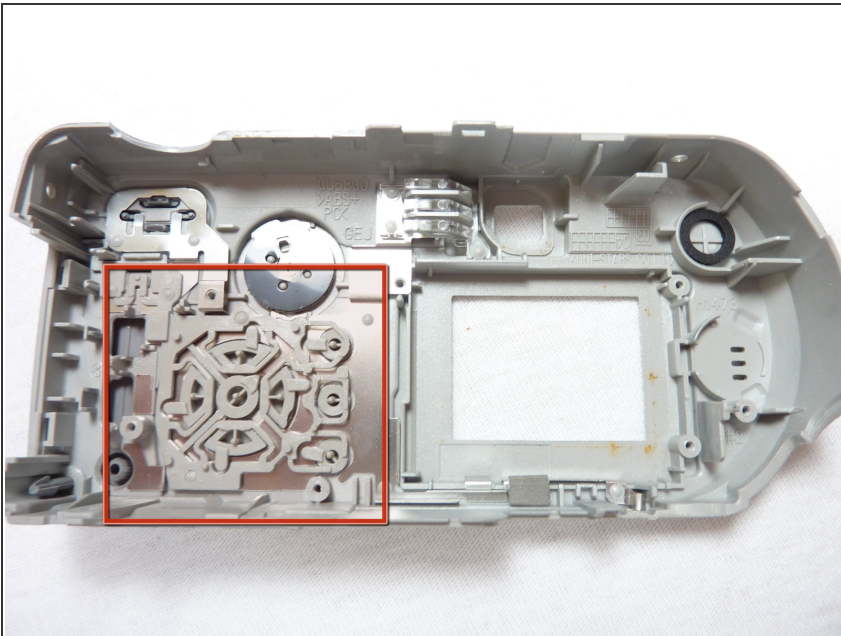

- Clean out dust and debris from button interface.
- Replace faulty and broken buttons as necessary.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:20:26 AM.